

This error will auto reset, when the grid is ok again. Nothing needs to be done

Does this solve the problem?

- 1] Yes
- 2] No
- 3] I don't know

• **Explanation**

The Frequency on L1 is lower than the min limit. See alarm list (stop and reset functions) for the specific turbine type.

Change the contactor and fuses

Does this solve the problem?


- 1] Yes
- 2] No
- 3] I don't know

• **Explanation**

Contactor Q14 burned/blocked and CB F14 tripped (Gear oil pump):



Contactor Q14 burned:

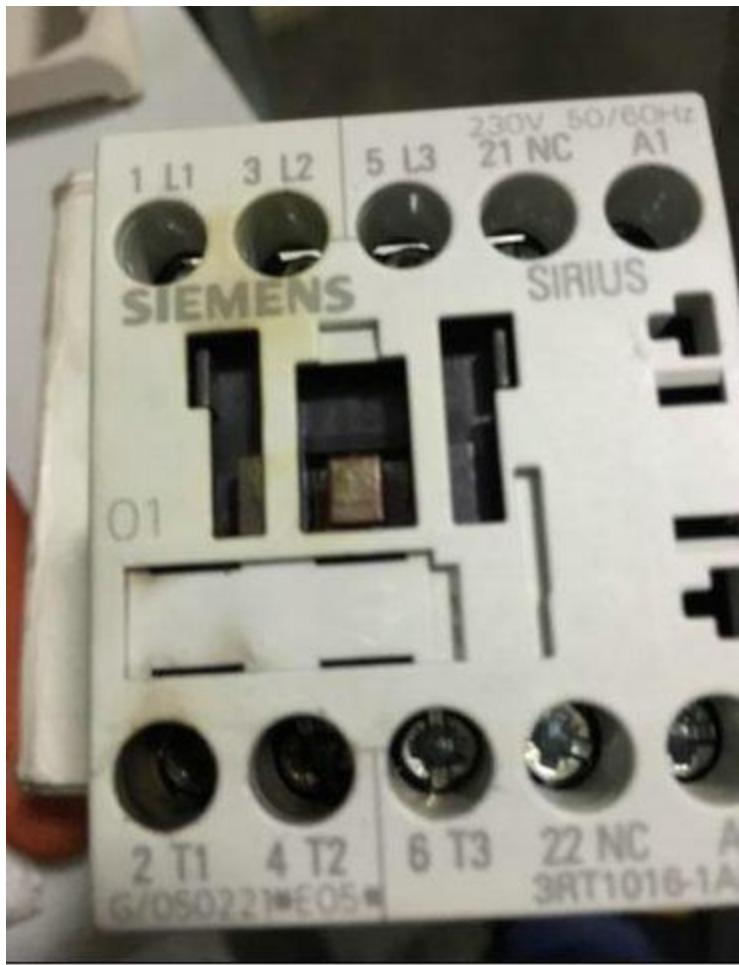

Blown fuses was also found on F29 (supply line to motors):



Do a megger test of M08 (gear oil pump motor) and it can be manually tested through the service menu (manual test).

Relevant spare parts	
Description	Item No.
CONT 3RT10161AP02 230V 50/60HZ	60004394
FUSE 690V 50A NH00 GL/GG	60005097